



1

See detail G "Cutting In a Penetration" for instructions on installing the membrane around a pipe penetration. Then continue steps 2 through 6 of this detail.


2

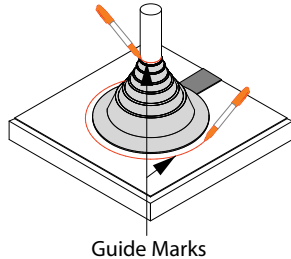


3

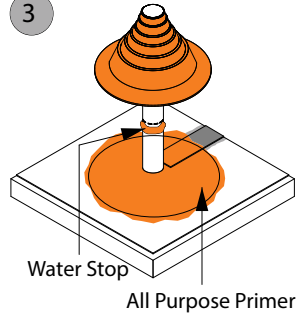


4

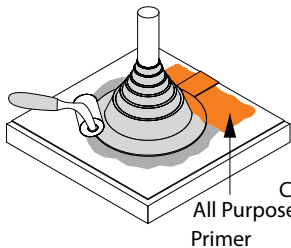

5

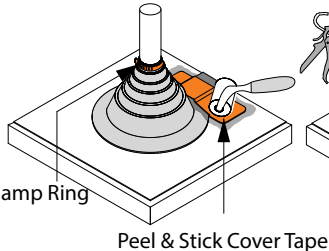

6

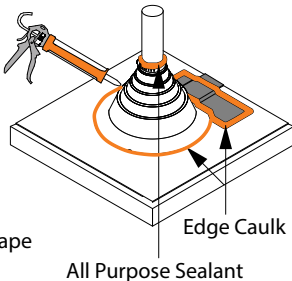

1. See Detail G "Cutting In a Penetration".

2. Size the Peel & Stick Pipe Boot to fit the pipe diameter and position over the pipe without removing the release liner from boot flange. Mark pipe at the top of the boot and 1/2" outside of the flange.

3. Raise or remove the boot. Apply All Purpose Primer to the deck membrane, extending past the marks you made. Allow to flash off. Apply Water Stop in a 3/8" wide bead 1/2" below the mark you made on the pipe. Remove the liner from the boot flange, and slide boot down to mate with the membrane. The inside top of the boot will sit in the bead of Water Stop.

4. Roll the boot flange. Apply All Purpose Primer to the T-Joint area where the boot flange extends over the Peel & Stick Cover Tape for 6" x 12". Allow to flash off.

5. Cut a 6" x 12" piece of Peel & Stick Cover Tape, remove the release liner, and apply the Cover Tape to the primed membrane & boot flange, centered on the T-Joint area. Hand roll. Install the stainless steel clamping band at the top of boot. Tighten to create a compression seal between the boot and the pipe.

6. Apply All Purpose Sealant to the top of the pipe boot and Edge Caulk along all flashing and boot flange edges.

H

Peel & Stick Pipe Boot Installation

